


Part 1b – Install the Wall Piece (Concrete/Brick)

1. Place the wall piece against the wall and level it using the bubble level.
2. Mark off the two holes for securing the mount and place the wall piece aside.
3. Using an electric drill and 5/16" masonry bit, drill the marked holes. After drilling, remove any excess dust from the holes.
4. Insert a Concrete Anchor (B) into each hole. A hammer can be used to lightly tap each anchor into place if necessary.
5. Move the wall piece back against the wall and attaching using the Drywall Screws (A) from the hardware kit. Make sure both screws are snug, but do not to over-tighten them.

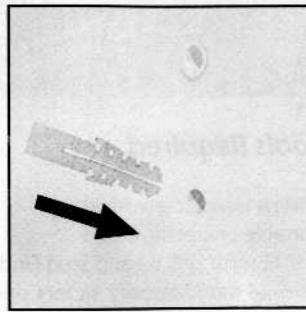


Part 2 – Attach the Mount to the Display

Important! Use extra care during this part of the installation. Avoid laying your display face down if possible as it may damage the viewing surface.

NOTE: Your mount comes with a selection of bolt diameters and lengths to accommodate a wide variety of display models. Not all of the hardware in the kit will be used.

1. Determine which hardware to use by examining the back of your display. If your display has a flat back, you will use the M4x12 Bolts (C). If your display has a curved or recessed back, you will use the M4x30 Bolts (D) and Spacers (E).
2. Attach the mount to the back of your display using the hardware determined in Step 1. If you feel any resistance while inserting a bolt, stop immediately to avoid damage to your display. Do not over-tighten these bolts.

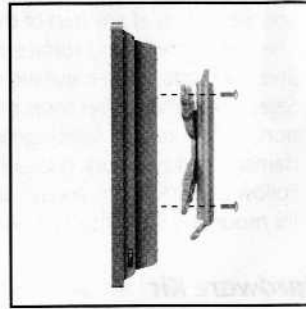

Part 3 – Final Installation and Operation

1. To complete the installation, simply slide the mount with your LCD attached into the wall piece. The plastic tab at the top of wall piece should click indicating that the mount is secure.
2. To remove the mount, push in on the plastic tab and then slide the mount up.

